


# Otter<sup>®</sup>


## Hideout Hyfax Installation Instructions

1. Start with the longest strip, which attaches to the center rib. Line up the end with the 45 degree cut with the step at the front of the sled. Bending the strip in a curve before attaching will make installation easier. Hyfax should be at warm room temperature before bending.



2. Center the strip on the rib, and using the hole in the hyfax strip as a guide, drill a hole into the sled using a 1/8" drill bit. Attach the strip to the sled using the provided allen screw and small washer. Using an allen bit and drill/driver will allow the screw to be driven into the small hole in the plastic. Turn in until just barely tight. This may be done by hand but will require more effort.

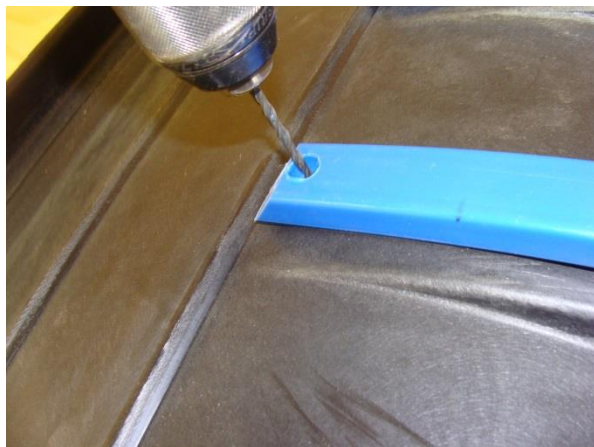

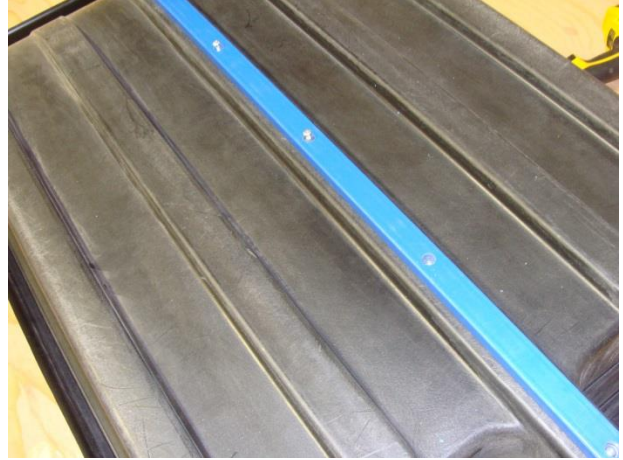

3. Repeat for the other 4 strips.



4. Turn the sled over and tighten the nylock nuts and larger washer onto the allen screw. The screws should hold in place while tightening them down if the correct size hole was drilled and they were not over tightened. Tighten until snug.

