




# #200086 (0400), #200085 (0450) Tow Hitch Installation and Set-Up Instructions

**Tools Required:**  
1/2 Socket or Wrench  
Adjustable Crescent Wrench

**Towing Hitch Instructions for the Following Sleds:**  
Otter Pro Small Sled  
Otter Pro Small Ultra-Wide Sled  
Otter Pro Medium Sled  
Otter Pro Magnum Sled  
Otter Pro Large Sled  
Otter Wild Small Sled  
Otter Wild Small Ultra-Wide Sled  
Otter Wild Medium Sled  
Otter Wild Magnum Sled

**Installation:**

1. Layout all parts.
2. Lay side tubes (Item 1) on ground to form an "A" shape.
3. Attach side tubes (Item 1) to hitch coupler (Item 2) with 5/16 x 3 hex bolts (Item 3), washers (Item 4), and lock nuts (Item 5).
4. Assemble towing hitch assembly to sled (sold separately) with hitch pins (Item 6).
5. Secure hitch pins with the attached spring clips.

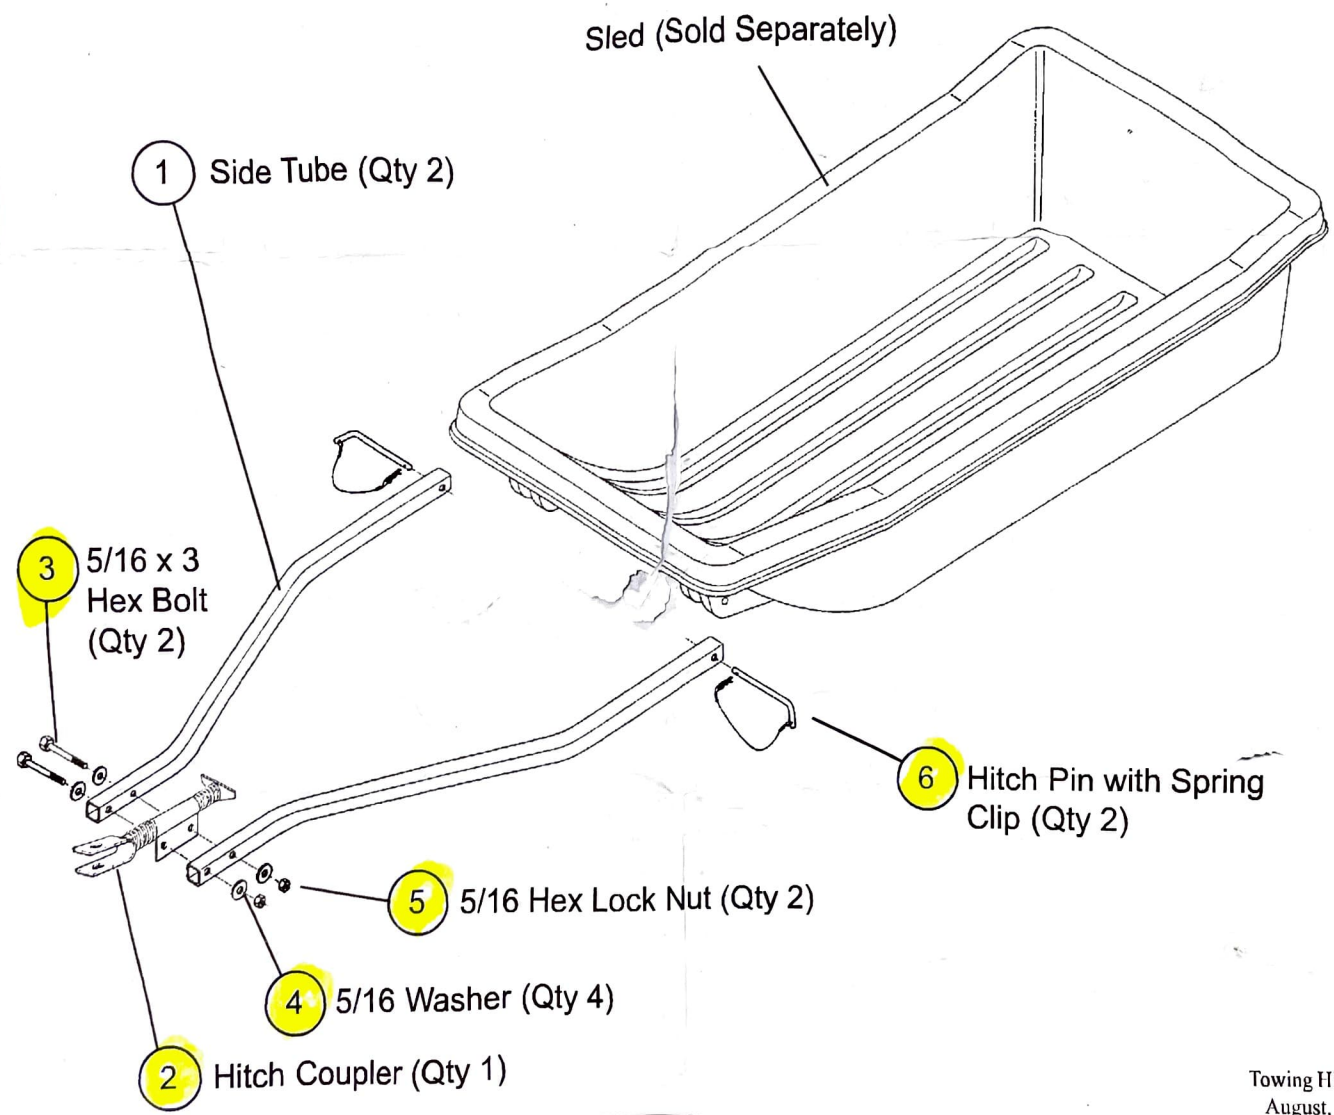

Towing Hitch 2  
August, 2002

Otter Outdoors Inc.  
411 W Congress St. • Maple Lake, MN 55358  
Phone 320-963-6480 • www.otteroutdoors.com

Instructions - 70712

\* (2) A (6)

PIECES MANQUANTES